


## PRODUCT DATA SHEET

Part Number(s): **NX 180 SW Extension Series** 180° swivel extension adapter with self seizing contact

Part Number	A (inches)
NX 180 1.5 SW	3.580
NX 180 3 SW	5.080
NX 180 4.5 SW	6.580
NX 180 6 SW	8.080

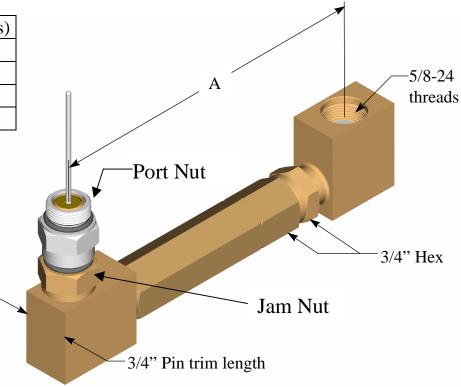

# **Operation Specification:**

Bandwidth 0 MHz to 1 GHz

Impedance 75 Ohms

Return Loss Better than -30 dB to 1 GHz
Insertion Loss Less than 0.10 dB to 1 GHz

Operating Voltage Rating 90 Volts (@ 60 Hz continuous AC)
Operating Current Rating 20 Amps (@ 60 Hz continuous AC)

Operating Temperature Range -40° to +140° F

# **Tooling Requirements**


- Two (2) 3/4" wrenches
- Suitable wrenches for installing pin connector
- Cutters for pin of connector



## INSTALLATION INSTRUCTIONS

#### **NX 180 SW Extension Series**

- 1. Loosen the equipment seizure screws.
- 2. Measure and trim the pin of the NX 180 SW to the equipment manufacturer's specification.
- 3. Trim the pin of the connector to ¾". Use the width of the Adapter as a pin trim guide.
- 4. Hand tighten the connector into the port of the NX 180 SW and then wrench tighten an additional 1/8 to ½ turns while holding the adapter with another wrench.
- 5. Hand tighten the port nut of the NX 180 SW into the equipment housing then tighten an additional 1/8 to ½ turn with a wrench.
- 6. Hand tighten the jam nut of the Right Angle Adapter to the port nut while holding the adapter stationary, then further tighten the jam nut 1/8 to 1/4 turn with a wrench.
- 7. Tighten the seizure screw within the equipment housing according to the manufacturer's specification.

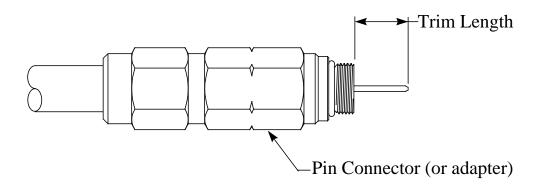

Document Number: Revision A Page 2 of 2