

# FlexPON® 2-Port Enclosure for 1x2 Coupler Installation Instructions



## STEP 1

Once mounted, open the enclosure and cut the right side stepped grommet to fit over the end of the fiber drop cable or microduct.



## STEP 2

Pull the end of the drop cable into the fiber input port and secure with the band clamp - and strength member clamp, if applicable.



## STEP 3

Position the grommet so it seals the fiber input port.



## STEP 4

Install 1x2 50-50 OSP Coupler in location shown. Secure in place with self-tapping screws provided.



# FlexPON® 2-Port Enclosure for 1x2 Coupler Installation Instructions




## STEP 5

Cut the left side stepped grommet to fit over the end of the fiber payout cable or microduct.



## STEP 6

Pull the premises fiber cable or microduct into the fiber port and secure with the band clamp - and strength member clamp, if applicable.

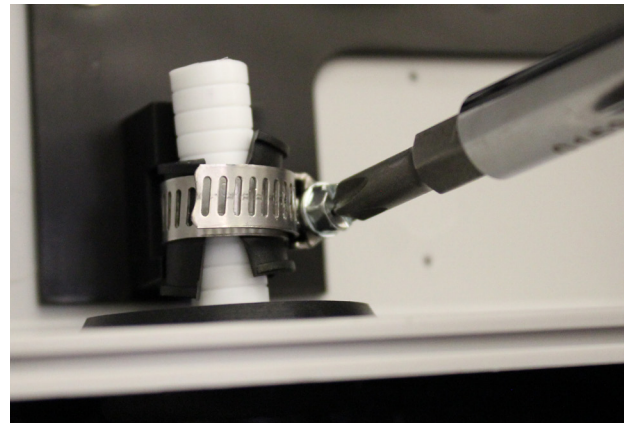

## STEP 7

Clean and make all necessary fiber connections to the input and output leads of the 1x2 50-50 OSP Coupler. Lift up on the lid and swing the door shut.



## STEP 8

Secure the door closed using a can wrench.



r1\_12042023