

# Flexshell™

## Buried Force Encapsulation Closures

*Installation Instructions*




### Installation Steps


#### 1. Install Bond/Strain Relief Bar




#### 2. Construct Splice

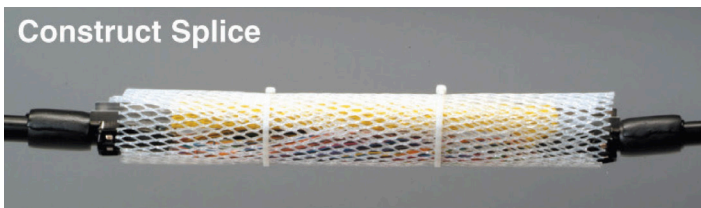


#### 3. Build End Collars

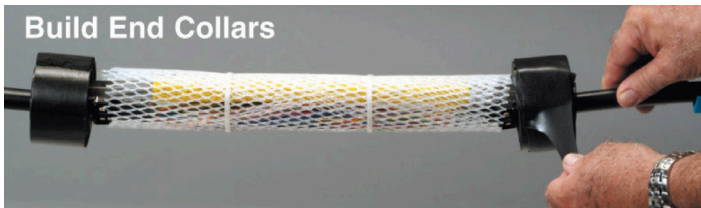

#### 4. Apply Shell and Tighten Straps

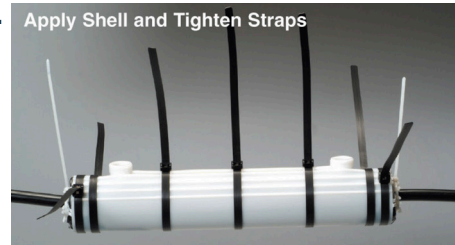

#### 5. Pour Encapsulant

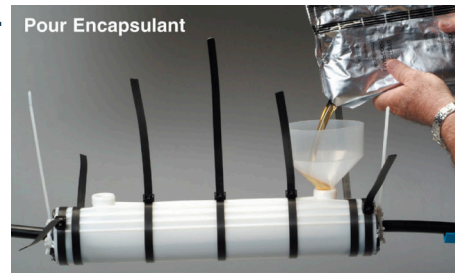

#### 6. Install Valves and Pressurize



### Installation Steps

Part Number	Description	Packaging
TBTFL4	Closure for 5 in Opening and Up to 3 in Splice Bundle	1/Box
TBTFL8	Closure for 11 in Opening and Up to 3.5 in Splice Bundle	1/Box
TBTFL13	Closure for 21 in Opening and Up to 3.5 in Splice Bundle	1/Box
TBTFL18	Closure for 21 in Opening and Up to 5.5 in Splice Bundle	1/Box
TBTFL28	Closure for 21 in Opening and Up to 7" Splice Bundle	1/Box
TBTRK4	Re-Entry Kit for TBTFL4	1/Bag, 5/Box
TBTRK8	Re-Entry Kit for TBTFL8	1/Bag, 5/Box
TBTRK13	Re-Entry Kit for TBTFL13	1/Bag, 5/Box
TBTRK18	Re-Entry Kit for TBTFL18	1/Bag, 5/Box
TBTRK28	Re-Entry Kit for TBTFL28	1/Bag, 5/Box
TBTXK8	Extension Kit for TBTFL8 and TBTFL13	1/Bag, 5/Box
TBTXK18	Extension Kit for TBTFL18	1/Bag, 5/Box
TBTBEP	Blank End Plate for Butt Splice Configurations	5/Box

This product may be protected by one or more patents • For further information, please visit: [www.ppc-online.com/patents](http://www.ppc-online.com/patents)

customerservice@ppc-online.com • 1-800-800-6652 • [www.ppc-online.com](http://www.ppc-online.com)