

Flexshell™

Buried Force Encapsulation Closures

Installation Instructions




Installation Steps


1. Install Bond/Strain Relief Bar




2. Construct Splice

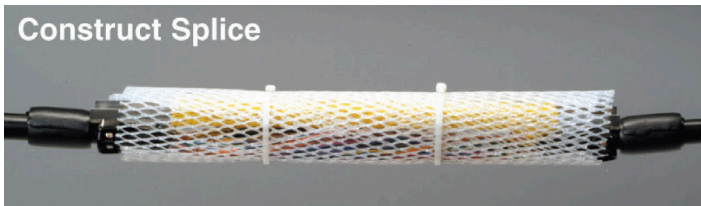


3. Build End Collars

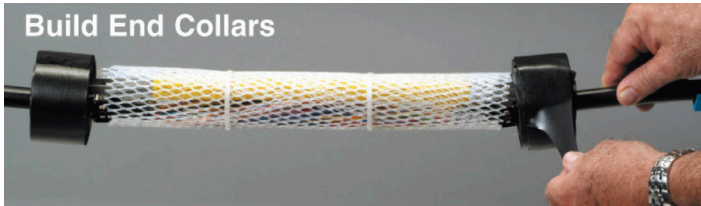

4. Apply Shell and Tighten Straps

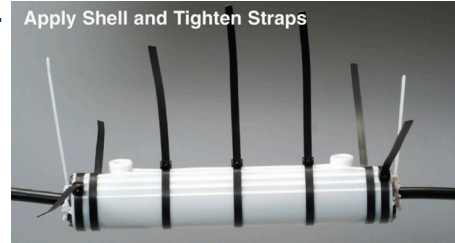

5. Pour Encapsulant

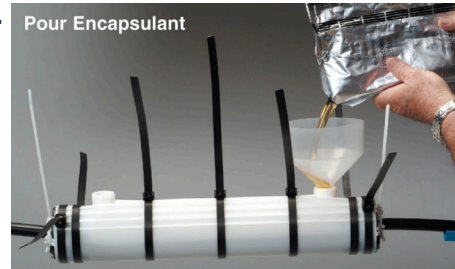

6. Install Valves and Pressurize



Installation Steps

Part Number	Description	Packaging
TBTFL4	Closure for 5 in Opening and Up to 3 in Splice Bundle	1/Box
TBTFL8	Closure for 11 in Opening and Up to 3.5 in Splice Bundle	1/Box
TBTFL13	Closure for 21 in Opening and Up to 3.5 in Splice Bundle	1/Box
TBTFL18	Closure for 21 in Opening and Up to 5.5 in Splice Bundle	1/Box
TBTFL28	Closure for 21 in Opening and Up to 7" Splice Bundle	1/Box
TBTRK4	Re-Entry Kit for TBTFL4	1/Bag, 5/Box
TBTRK8	Re-Entry Kit for TBTFL8	1/Bag, 5/Box
TBTRK13	Re-Entry Kit for TBTFL13	1/Bag, 5/Box
TBTRK18	Re-Entry Kit for TBTFL18	1/Bag, 5/Box
TBTRK28	Re-Entry Kit for TBTFL28	1/Bag, 5/Box
TBTXK8	Extension Kit for TBTFL8 and TBTFL13	1/Bag, 5/Box
TBTXK18	Extension Kit for TBTFL18	1/Bag, 5/Box
TBTBEP	Blank End Plate for Butt Splice Configurations	5/Box

This product may be protected by one or more patents • For further information, please visit: www.ppc-online.com/patents

customerservice@ppc-online.com • 1-800-800-6652 • www.ppc-online.com