

Installation Instructions

Perfect Flex® Cable & 500' NexReel™




Please follow these installation steps in the order presented:

1



Open the Perfect Tote™ bag and remove the 500' NexReel™.

2

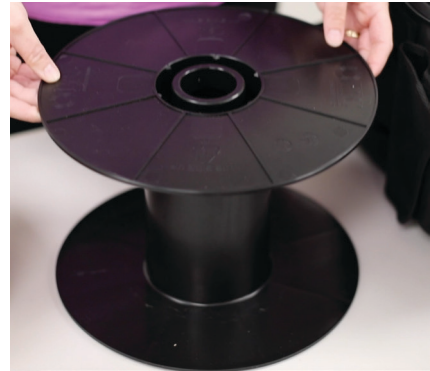

Remove the top of the 500' NexReel.

3



Place the cardboard cable packaging onto the 500' NexReel and tear the perforated middle section of the cardboard packaging from the cable reel. Note "This Side Down" on the bottom of the packaging.

4



Remove the perforated middle section and the cardboard top completely and replace the top of the 500' NexReel.

5



Place the 500' NexReel into the Perfect Tote bag. Note "This Side Up" on the top of the 500' NexReel.

6



Feed the cable end through the open side of the bag and through the storage loop and close the bag.



Cardboard packaging is recyclable

These products may be protected by one or more patents • For further information, please visit: www.ppc-online.com/patents

6176 E. Molloy Rd. East Syracuse, NY 13057 U.S.A. • customerservice@ppc-online.com • 1-800-800-6652 • +1 315-431-7200 • www.ppc-online.com