

QuikPass™ Fiber Entry Box Installation Instructions




PPC® QuikPass™ | FIBER ENTRY BOX

The PPC® QuikPass™ Fiber Entry Box is positioned over the PPC® QuikPass™ Miniflex® Cable and securely holds the cable. After window cutting the cable, fibers are pulled into the box and coiled.

The PPC QuikPass Fiber Entry Box features all necessary components to connect the subscriber to the PPC QuikPass Miniflex Cable and offers a range of termination options. These include: fusion splice, field fit connectors, terminated drop cables, and the option to push the fiber from the PPC QuikPass Fiber Entry Box to the customer terminal / ONT.

Installation Instructions

1. Using the template below, drill both fixing holes and the relevant cable through hole. To minimize the potential for dust and debris inside the terminal, it is not advised to drill with the box in place.
2. Using the supplied fixings, mount the PPC® QuikPass™ Fiber Entry Box over the Window-Cut in the PPC QuikPass MiniFlex Cable. Do not over-tighten the screws.
3. Fit the lid to the box to complete installation. Repeat the process to install PPC QuikPass Fiber Entry Boxes for additional subscribers, as needed.
4. The PPC QuikPass solution has at least 3 termination options to connect the retracted fiber. For full instruction, follow the QR link code (see right).

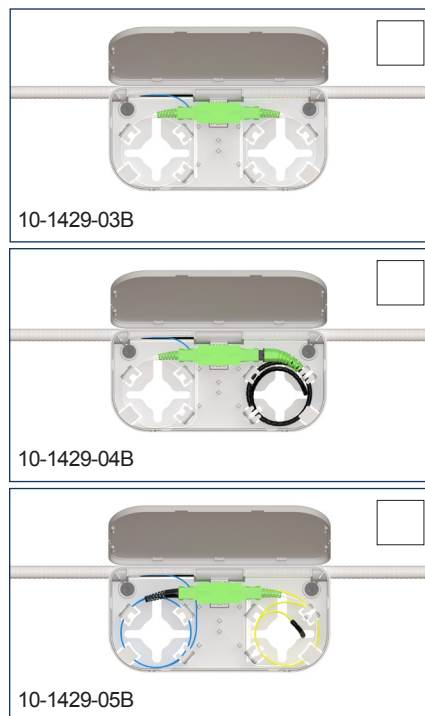

Learn More



DRILLING TEMPLATE

