TuffDrop™ Fiber & RG6
Installation Instructions

A BELDEN BRAND

Recommended Prep Tools

TuffDrop™ Fiber & RG6

TuffDrop™ allows for effortless score-and-snap removal using the Miniflex® Ring & Slit Kit (RSK-MINIFLEX) or standard RG11 prep tools (CPT1100TS).



CPT1100TS




RSK-MINIFLEX

Ordering Information


PPC Part Number	Description
TDF-DD-1000FT	TuffDrop Underground Toneable Bulk Fiber, 900µm, 1000FT | Weight: 65 lb
TDF-DD-2000FT	TuffDrop Underground Toneable Bulk Fiber, 900µm, 2000FT | Weight: 116 lb
PTD6ET77EFORF	TuffDrop Underground PerfectPrep RG6 Bulk Cable, Tri-Shield, 1000FT | Weight: 72.5 lb
RSK-MINIFLEX	Miniflex Ring & Slit Kit – works with 2mm to 10mm Miniflex products, as well as TuffDuct™ & TuffDrop
CPT1100TS	RG11 Tri-shield Prep Tool

Installation | Follow these directions for TuffDrop™ Fiber & RG6


Step 1
Measure the proper length of slack needed for the install and attach the cutting tool at the cut location.

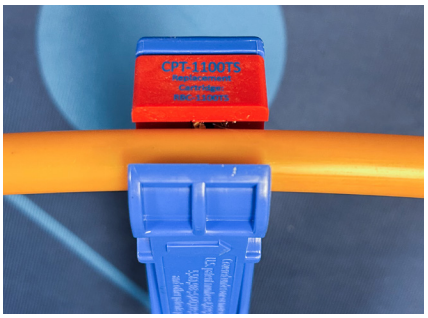

Step 2
Score the duct by rotating the tool around the duct one to three times.

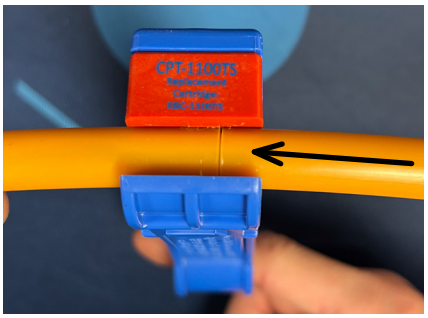


Step 3
Firmly grasp the duct on either side of the score and snap it.

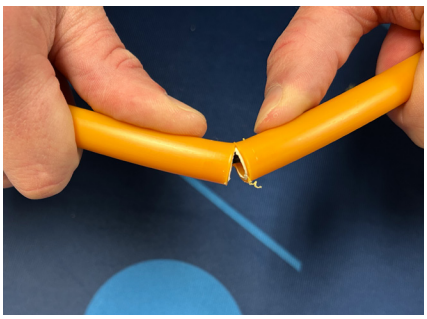

Step 4
Remove the cut section of the duct and proceed with the standard installation steps.



NOTE
Avoid cutting THROUGH the duct as you may cut the cable inside

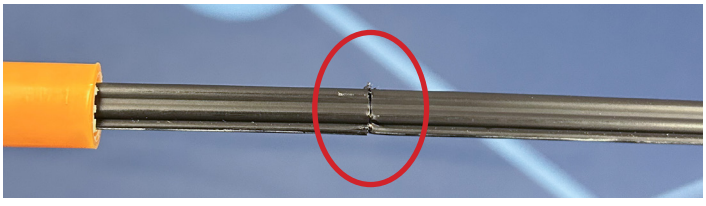

r2_09252025

These products may be protected by one or more patents. For further information, please visit: www.ppc-online.com/patents

6176 E. Molloy Rd. East Syracuse, NY 13057
bbs.cs@belden.com
1-800-800-6652 • +1 315-431-7200
www.ppc-online.com