



Keystone Wall Plates and Accessories




Cat5E, Cat6 and Phone Keystones

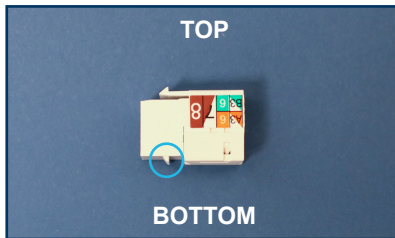

Fiber Keystones

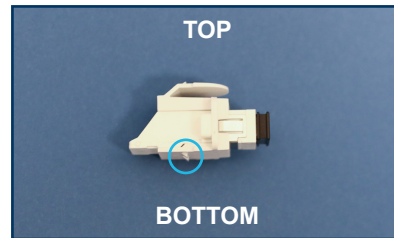


F81/Blank Keystone

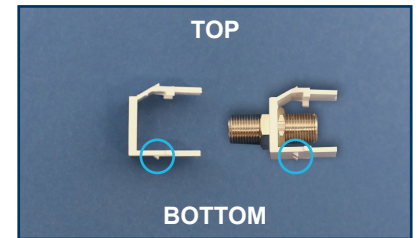

Installation Instructions



1. Align the wall plate in the correct position (the front on the back of plate indicates the correct upright orientation).

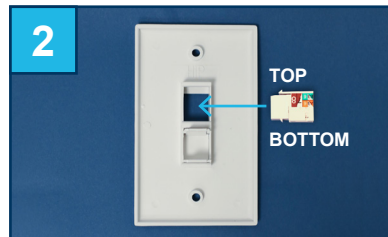

2. Confirm the keystone accessory is aligned in the correct upright orientation.



3. Align the two small latches on the bottom of the accessory (circled in blue above) with the corresponding lip on the wall plate, and confirm the wall plate lip holds the accessory properly in place.



4. Keep the bottom aligned on the lip and pivot the top of the accessory inward until the top latch clicks into place.



5. View the front of the wall plate and confirm the accessory is seated properly into the keystone slot.

Keystone Removal

1. Hold the wall plate so you can push from the front side and pull from back side
2. Press down on the top latch of the accessory, while pushing the front face of the accessory backward through the keystone slot

Tips and Tricks

- Terminate the accessory prior to installing the keystone into the wall plate
- When installing Cat5E, Cat6 and Phone keystones, install the wall plate so the copper contacts are oriented upward. This helps protect the port and mitigates any dust or dirt from accumulating on the contacts, ensuring a proper connection