


CKSKSHFS

Install Instructions



Product Image

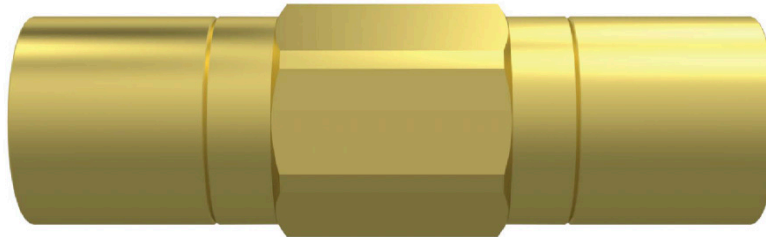

Installation Instructions

1. Measure and trim both pins of the mating connectors that will be installed into the Female Splice Coupler to 5/16" (.56")
NOTE: To ease installation, cut the pins at a slight angle
2. Use a twisting motion to insert the cut pin into the socket of the Female Splice Coupler
3. Hand tighten, and then tighten an additional 1/8 to 1/4 turn with a wrench
4. Repeat step 2 & 3 for the other connector

