


CKSKSHFS

Install Instructions



PRODUCT IMAGE:

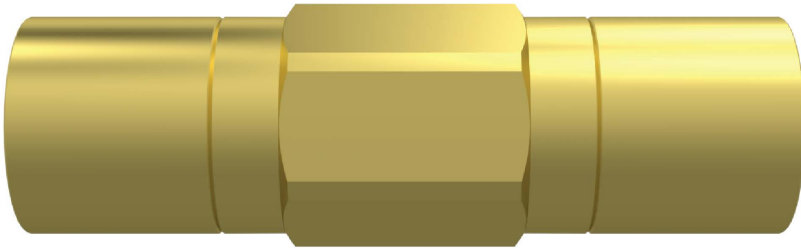

1. Measure and trim both pins of the mating connectors that will be installed into the Female Splice Coupler to $5/8$ ". To ease installation, cut the pins at a slight angle.
2. Use a twisting motion to insert the cut pin into the socket of the Female Splice Coupler. Hand tighten, and then tighten an additional $1/8$ to $1/4$ turn with a wrench.
3. Repeat step 2 for the other connector.

