



# CP901.5 Install Instructions



## PRODUCT IMAGE:

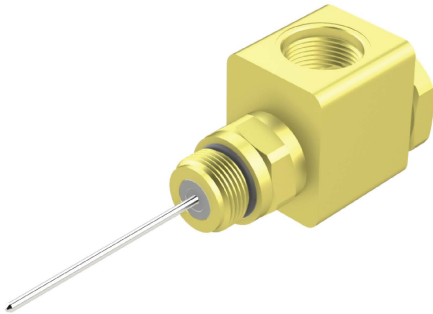

1. Loosen the equipment seizure screw.
2. Measure and trim the pin of the right angle adapter according to equipment manufacturer's specification.
3. Thread the right angle adapter into the equipment approximately 3 – 1/2 turns.
4. Remove the dust cap for the right angle adapter and loosen the seizure screw.
5. Trim the pin of the connector to 9/16" as indicated in the diagram below.
6. Hand tighten the connector into the right angle adapter. Wrench tighten an additional 1/8 to 1/4 turn (20 - 25 foot-pounds) while holding the CP 901.5 body stationary with another wrench.
7. Install the prepared cable into the pin connector and tighten connector per the manufacturer's instructions.
8. Finger tighten the seizure screw to the connector pin within the adapter, then tighten an additional 1/8 to 1/4 turn with a screw driver or nut driver.
9. Hand tighten the dust cap to the adapter then tighten an additional 1/8 to 1/4 turn (20 - 25 foot-pounds) with a wrench while holding the adapter body stationary with a second wrench.
10. Hand tighten the jam nut of the adapter to the port nut. While holding the CP 901.5 body stationary with a wrench, use a second wrench to tighten the jam nut an additional 1/8 to 1/4 turn (15-20 foot-pounds).
11. Tighten the seizure screw within the equipment housing according to the manufacturer's specification.

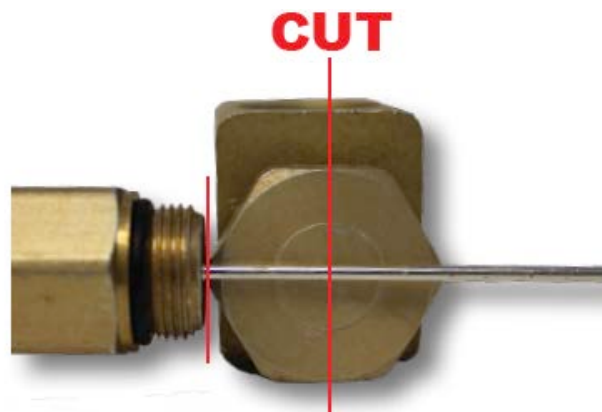

This product may be protected by one or more patents • For further information, please visit: [www.ppc-online.com/patents](http://www.ppc-online.com/patents)

[customerservice@ppc-online.com](mailto:customerservice@ppc-online.com) • 1-800-800-6652 • [www.ppc-online.com](http://www.ppc-online.com)