
CPPA180PD Install Instructions



PRODUCT IMAGE:



- 1. Loosen the equipment seizure screws.
- 2. Measure and trim the pin of the 180 Degree Adapter according to equipment manufacturer's specification.
- 3. Thread the 180 Degree Adapter into the equipment housing approximately 3 1/2 turns.
- 4. Remove the dust cap of the 180 degree adapter and loosen seizure screw.
- 5. Trim the pin of the connector to 9/16" as shown below in the diagram.
- 6. Hand tighten the pin connector into the 180 Degree Adapter then wrench tighten an additional 1/8 to ½ turns while holding the adapter with another wrench.
- 7. Install the prepared cable into the pin connector and fully tighten per the connector installation instructions.
- 8. Finger tighten the seizure screw to the connector pin within the adapter, then tighten an additional 1/8 to 1/4 turn (10 in/lb) with a screw driver or nut driver.
- 9. Hand tighten the jam nut of the 180 Degree Adapter to the equipment housing while holding the connector in position, then further tighten the jam nut with a wrench an additional 1/8 to ½ turns (20 / 25 ft/lb).
- 10. Hand tighten the jam nut between the 90 degree blocks, then further tighten 1/8 to \(^1/4\) turns with a wrench.
- 11. Hand tighten the dust cap(s) to the adapter then tighten an additional 1/8 to 1/4 turn (20 25 foot-pounds) with a wrench while holding the adapter bodies stationary with a second wrench.
- 12. Tighten the seizure screw within the equipment housing according to the manufacturer's specification.

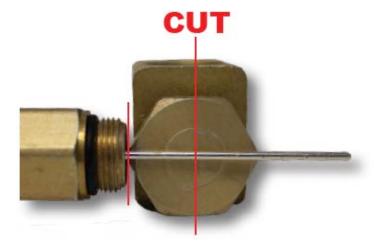

rev3_