


ICHBAFFKS/2 Install Instructions



PRODUCT IMAGE:

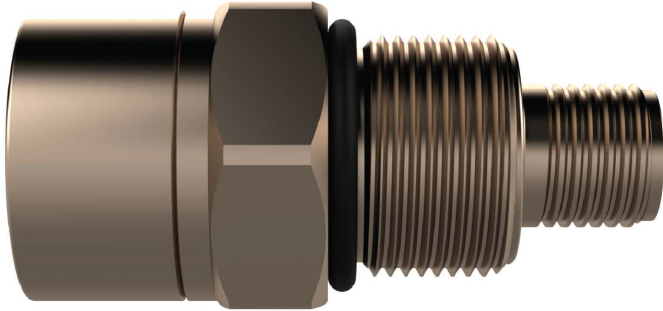

1. Measure and trim the connector pin to .375" from the end of the surface of the connector.
2. Hand tighten the ICH BAFF KS / 2 adapter onto the prepared end of the connector then tighten an additional 1/8-1/4 turns with a wrench.

