


# NX180 Install Instructions



## PRODUCT IMAGE:

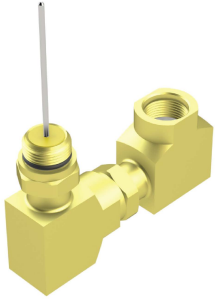

1. Loosen the equipment seizure screws.
2. Measure and trim the pin of the 180 Degree Adapter according to equipment manufacturer's specification.
3. Thread the 180 Degree Adapter into the equipment housing approximately 4 turns.
4. Trim the pin of the connector to  $\frac{3}{4}$ ". Use the width of the 180 Degree Adapter as a pin trim guide.
5. Hand tighten the pin connector into the 180 Degree Adapter. Wrench tighten an additional  $\frac{1}{8}$  to  $\frac{1}{4}$  turns while holding the adapter with another wrench.
6. Install the prepared cable into the pin connector and fully tighten per the connector installation instructions.
7. Hand tighten the jam nut of the 180 Degree Adapter to the equipment housing while holding the connector in position, then further tighten the jam nut with a wrench an additional  $\frac{1}{8}$  to  $\frac{1}{4}$  turns.
8. Hand tighten the jam nut between the 90 degree blocks, then further tighten  $\frac{1}{8}$  to  $\frac{1}{4}$  turns with a wrench.
9. Tighten the seizure screw within the equipment housing according to the manufacturer's specification.

## Tooling Requirements:

- Two (2)  $\frac{3}{4}$ " wrenches
- Suitable wrenches for installing pin connector
- Cutters for pin of connector

