


NX90SW Install Instructions



PRODUCT IMAGE:



1. Loosen the equipment seizure screws.
2. Measure and trim the pin of the Right Angle Adapter to the equipment manufacturer specification.
3. Trim the pin of the connector to $\frac{3}{4}$ ". Use the width of the Right Angle Adapter as a pin trim guide or the TRIM reference stamped on the bottom of the part.
4. Hand tighten the connector into the Right Angle Adapter. Wrench tighten an additional $\frac{1}{8}$ to $\frac{1}{4}$ turns while holding the adapter with another wrench.
5. Hand tighten the port nut of the Right Angle Adapter into the equipment housing then tighten an additional $\frac{1}{8}$ to $\frac{1}{4}$ turn with a wrench.
6. Hand tighten the jam nut of the Right Angle Adapter to the port nut while holding the adapter stationary, then further tighten the jam nut $\frac{1}{8}$ to $\frac{1}{4}$ turn with a wrench.
7. Tighten the seizure screw within the equipment housing according to the manufacturer's specification.

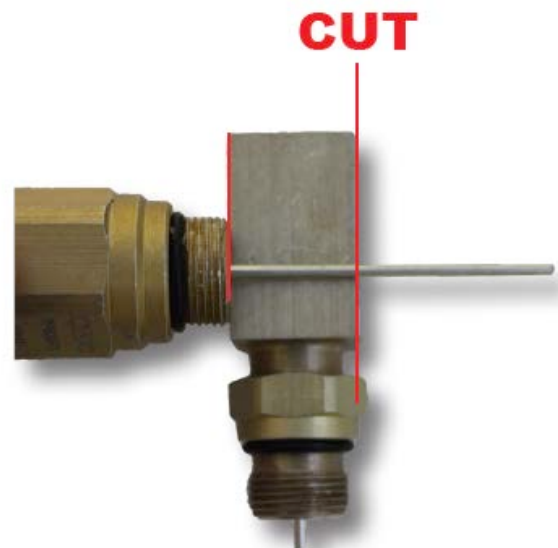

Tooling Requirements:

- Two (2) $\frac{3}{4}$ " wrenches
- Suitable wrenches for installing pin connector
- Cutters for pin of connector