


# Diamond® Drop Hanger

## Installation Instructions

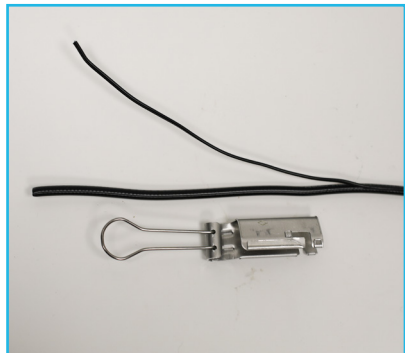

### Step 1

Separate at least 2 ft of messenger wire from the coax cable; Arrange the drop hanger clamp so the clamp ring is on the side with the cut end




### Step 2

Insert the cable into the clamp first, followed by the messenger wire, and feed the end of the messenger wire through the clamp ring; The point where the coax cable and messenger wire connect should be at the rounded end of the clamp.

### Step 3

Bend the messenger wire 180° over the rounded end of the clamp and pull it flat against the backside of the clamp

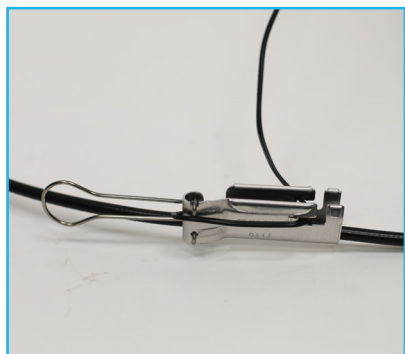

### Step 4

Holding the messenger wire tightly against the clamp, thread the wire through both L shaped Slots



### Step 5

Wrap the messenger wire twice around the clamp body and through the L shaped slots, stopping where the cable exits the clamp

### Step 6

Pull the messenger wire parallel with the exiting cable and cut the excess wire to about 1 ½ in



### Step 7

Make sure the wire end is wrapped tightly around the clamp at the L Slot and tuck the wire into the clamp toward the clamp ring

This product may be protected by one or more patents • For further information, please visit: [www.ppc-online.com/patents](http://www.ppc-online.com/patents)

[customerservice@ppc-online.com](mailto:customerservice@ppc-online.com) • 1-800-800-6652 • [www.ppc-online.com](http://www.ppc-online.com)