



FlexPON Demarcation Enclosure Installation Instructions

FlexPon Demarcation Enclosure Installation



STEP 1

Once mounted, open the enclosure and cut the right side stepped grommet to fit over the end of the fiber drop cable or microduct.



STEP 2

Pull the end of the drop cable into the fiber input port and secure with the band clamp - and strength member clamp, if applicable.




STEP 3

Position the grommet so it seals the fiber input port.



STEP 4

Route the excess fiber around the slack management tray and plug the drop fiber connector into the bottom of the SC coupler.

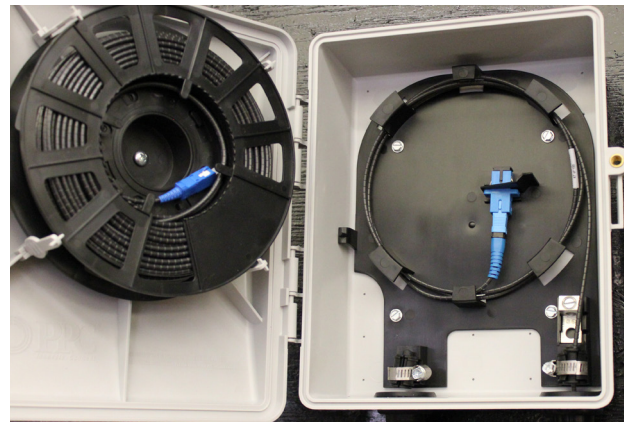

FlexPon Demarcation Enclosure Installation




STEP 5

Cut the left side stepped grommet to fit over the end of the fiber payout cable or microduct.




STEP 6

Clamp the microduct into the fiber payout port and position the grommet so it seals the fiber payout port.

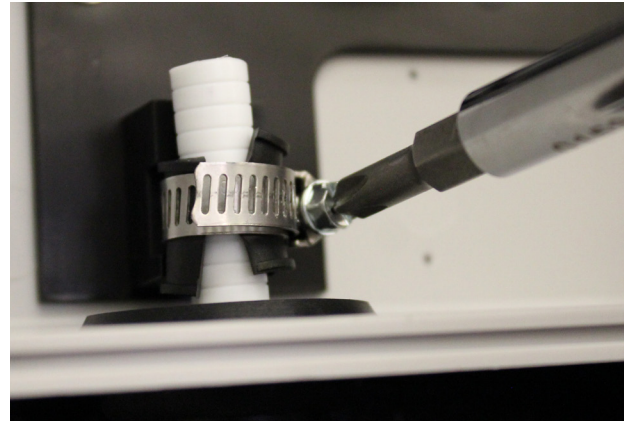


STEP 7

Push or pull the required fiber through the fiber payout port.

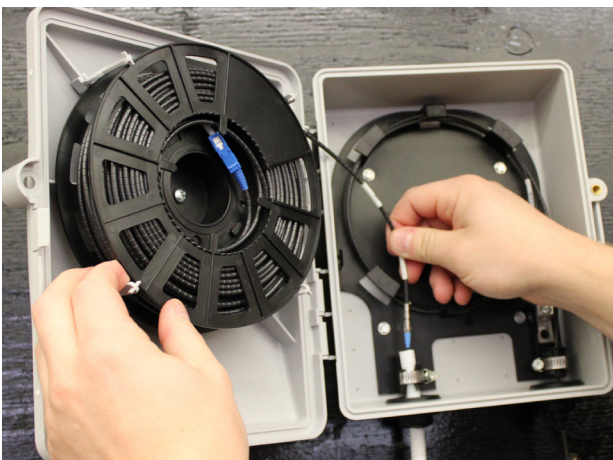

STEP 8

Pull the connector out from the center of the spool and make one clockwise wrap around the slack management.

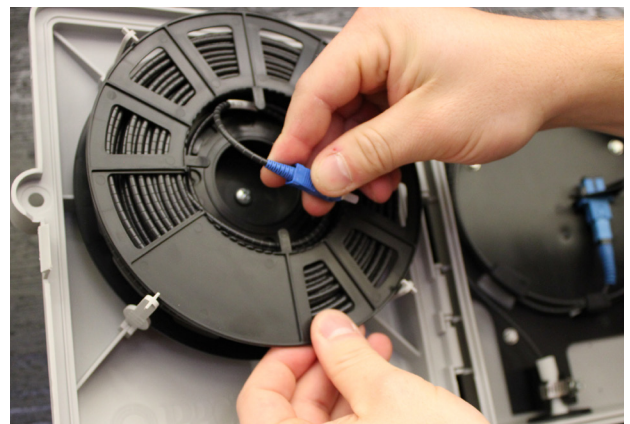


FlexPon Demarcation Enclosure Installation




STEP 9

Plug the connector into the top of the SC coupler and push both sides of the payout fiber underneath the left side retention member.

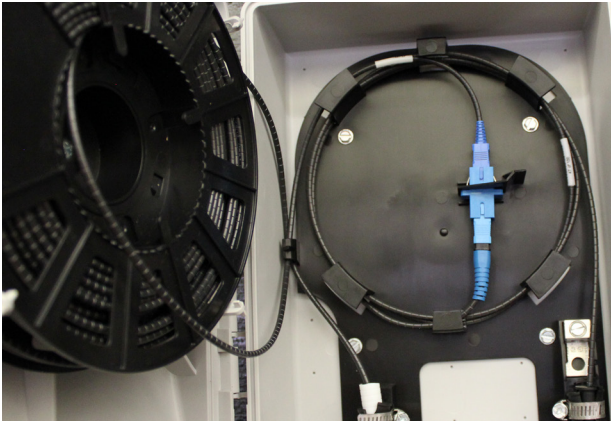

STEP 10

Lift up on the lid and swing the door shut.

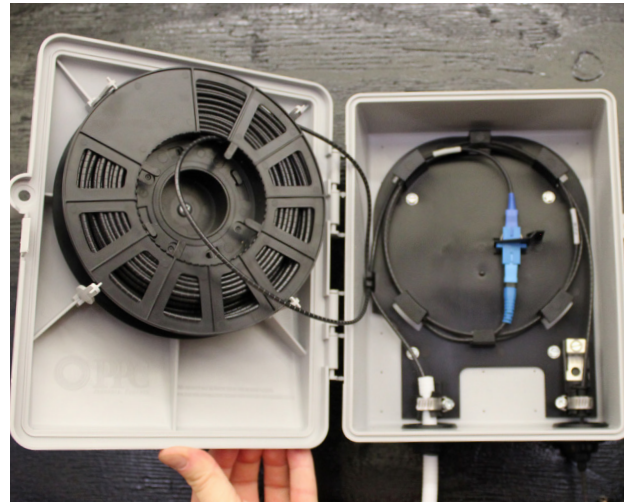

STEP 11

Secure the door closed using a can wrench.



For more than 70 years, PPC has been developing and manufacturing connectivity solutions for broadband service providers. Holding more patents in connector technology than any other company worldwide, PPC continues to be a premier driver of innovation and technical leadership.

HEADQUARTERS

Syracuse, New York
6176 East Molloy Road
East Syracuse, New York 13057
TEL: 315-431-7200
FAX: 315-431-7201

